

 
 
User's Guide

For your own safety,
Please read carefully.



SLIMLINE SPEAKER SYSTEM FOR IPOD WITH REMOTE CONTROL, FM RADIO AND ALARM CLOCK

iVIBE
Product name: ADS-70BLK

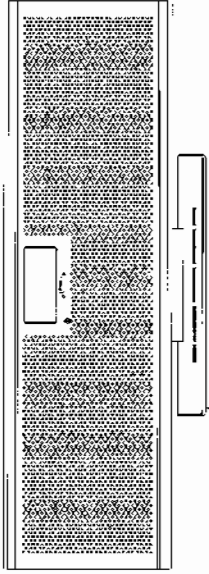

Thank you for purchasing the TDK Life on Record product
For optimum performance and safety, please read the "User's Guide" and "Safety and Care
Instructions" carefully.

To achieve the utmost in enjoyment and performance, please read this manual carefully before attempting to operate the unit in order to become familiar with its features and assure you years of faithful, trouble free performance and listening pleasure.

Important Notes

- Keep the safety and operating instructions for future reference.
- Avoid installing the unit in locations described below:
- * Places exposed to direct sunlight or close to heat radiating appliances such as electric heaters on top of other stereo equipment that radiate too much heat.
- * Places lacking ventilation or dusty places
- * Places subject to constant vibration. Humid or moist places
- Make sure not to obstruct the ventilation openings
- Before turning on this power for the first time, make sure the power cord is properly installed
- Do not expose this product to liquids, heat, the main plug of apparatus shall be disconnected from the mains.
- The minimum safety distance around the apparatus for sufficient ventilation is 10cm
- Dispose of all batteries according to the manufacturer's recommendation
- Do not expose the unit to extreme environmental conditions.
- The main plug should not be obstructed and should be easily accessed during intended use.
- Do not cover the unit
- Do not expose this product to naked flame or excessive heat.
- Do not expose the A/C power supply to liquids.
- The AC/DC adaptor is used as the disconnect device. It must remain readily operable and should not be obstructed during intended use. To be completely disconnected the plug must be removed from the supply mains.
- Batteries must not be exposed to excessive heat such as sunshine, fire or this like.

For safety reasons, do not remove any covers or attempt to gain access to the inside of this product. Refer any servicing to qualified personnel. Do not attempt to remove any screws, or open the casing of the unit, there are no user serviceable parts inside. Refer all servicing to qualified service personnel.



CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE

DANGEROUS VOLTAGE

Conductor dangerous voltage, that may be of sufficient magnitude to constitute a risk of electric shock to persons is present within this products enclosure.

ATTENTION



The owners manual contains important operating and maintenance instructions. for your safety, it is necessary to refer to the manual.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD DO NOT EXPOSE THIS APPLIANCE TO DRIPPING OR SPLASHING

Note:



This unit will become warm when used for a long period of time. This is normal and does not indicate a problem with the unit. Excessive sound pressure from earphones and headphones can cause hearing loss. If an unusual conditions occurs in the display window or key button, switch the unit off, then turn on the unit again.

FIXING THE BOARD FOR WALL MOUNTING

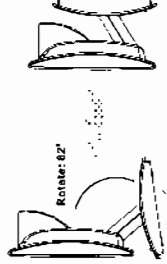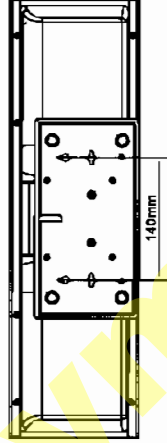

Universal Dock adapter connection


(Dock adapter not included)

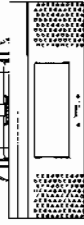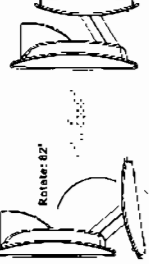

1. Fix the two nails (Size 3.5*25BA) into the wall and they should parallel each other. (The distance between the two nails should be 140 mm)
2. Please hang the main unit on the wall as showed by picture 2.

CAUTION: Ceiling mounting is not recommended. Mounting the unit on the ceiling does not provide adequate ventilation for the unit nor proper support. This product is designed for mounting in a vertical position.
Note: Screws are not included


LCD DISPLAY WINDOW

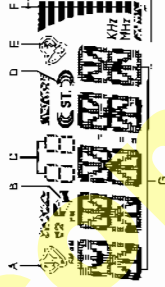

- A AL1 BELL SYMBOL INDICATOR
- B SLEEP INDICATOR
- C RADIO MEMORY NUMBER/SLEEP TIME INDICATOR
- D STEREO INDICATOR
- E AL2 BELL SYMBOL INDICATOR
- F VOLUME HIGH/LOW INDICATOR
- G TRACK NUMBER/TIME INDICATOR

2

FEATURES AND CONTROLS

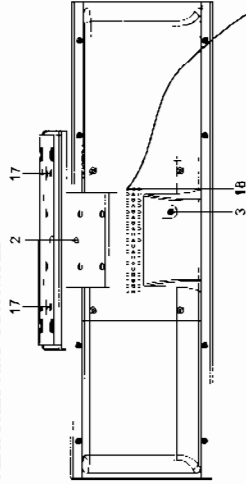

- 1 MAIN UNIT STAND
- 2 DC JACK
- 3 LINE IN JACK
- 4 STANDBY LED INDICATOR
- 5 LCD DISPLAY WINDOW
- 6 SPEAKER
- 7 STANDBY ON BUTTON
- 8 VOLUME DOWN BUTTON
- 9 VOLUME UP BUTTON
- 10 FUNCTION BUTTON
- 11 PLAY/PAUSE BUTTON
- 12 SKIP/TUNE SEARCH DOWN BUTTON
- 13 SKIP/TUNE SEARCH UP BUTTON
- 14 SNOOZE BUTTON
- 15 IPOD LED INDICATOR
- 16 IPOD CONNECTOR
- 17 WALL MOUNTING BRACKET
- 18 FM ANTENNA

REMOTE CONTROL

- 1. STANDBY ON BUTTON
- 2. FUNCTION BUTTON
- 3. PLAY/PAUSE BUTTON
- 4. REVERSE/FAST FORWARD/STEREO BUTTON
- 5. SNOOZE BUTTON
- 6. MENU BUTTON
- 7. SELECT BUTTON
- 8. PRESET/ARROW DOWN BUTTON
- 9. SLEEP BUTTON
- 10. EQ BUTTON
- 11. ALARM 1 SET/OFF BUTTON
- 12. MUTE BUTTON
- 13. VOLUME DOWN BUTTON
- 14. VOLUME UP BUTTON
- 15. ALARM 2 SET/OFF BUTTON
- 16. RECORD BUTTON
- 17. MEMORY BUTTON
- 18. PRESET/ARROW UP BUTTON
- 19. SKIP/SEARCH DOWN BUTTON
- 20. SKIP/SEARCH UP BUTTON

PUTTING THE BATTERY INTO THE REMOTE CONTROL UNIT

1. Press down on the compartment cover, and slide the cover off open the compartment
2. Place the battery (CR2032) into the battery compartment according to the polarity marking with the "+" sign facing up.
3. Place the cover over the compartment, press down lightly, and push it upward until it snaps on.

Note: Remove the battery from the remote control if not in used for a long period of time. Do not mix normal batteries with rechargeable batteries. When the batteries become weak, remote control will not function. Replace the batteries.

DANGEROUS VOLTAGE

Conductor dangerous voltage, that may be of sufficient magnitude to constitute a risk of electric shock to persons is present within this products enclosure.

ATTENTION

The owners manual contains important operating and maintenance instructions. for your safety, it is necessary to refer to the manual.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD DO NOT EXPOSE THIS APPLIANCE TO DRIPPING OR SPLASHING

Note:

This unit will become warm when used for a long period of time. This is normal and does not indicate a problem with the unit. Excessive sound pressure from earphones and headphones can cause hearing loss. If an unusual conditions occurs in the display window or key button, switch the unit off, then turn on the unit again.

POWER CORD CONNECTION

1. Connect the AC/DC Adaptor Plug to the DC jack on the right side of the unit.
2. Connect the AC/DC Adaptor Plug to the AC outlet socket.
- Note: 1. To start, connect the DC jack of external adaptor to the socket behind the main unit, then connect the AC plug to the main docked whilst the unit is in standby mode.
2. To avoid damage to the unit and/or your iPod device, the iPod device must be docked whilst the unit is in standby mode.

OPERATING THE UNIT

When you first plug the AC/DC Adaptor plug into the AC outlet socket, the unit will be in standby mode. You can press the STANDBY/ON button on the unit (or on the remote control) to switch the unit ON or OFF. Pull the AC/DC Adaptor plug out of the wall socket if you want to switch the unit off completely. Note: When the unit is in STANDBY mode, you can also press the FUNCTION button to switch the unit "ON". Switch off the unit by pressing the STANDBY button only.

POWER/STANDBY

1. Press the STANDBY/ON button on the unit (or remote control) to switch the unit on. The red STANDBY indicator will switch off.
 2. Select the sound source (iPod, AUX or Tuner) by pressing the FUNCTION button.
 3. Adjust the volume with the VOLUME (UP or DOWN) button.
 4. Set the preset equalizer (PASS, CLASSIC, ROCK, POP or JAZZ) with the EQ button on the unit (or remote control).
 5. Press the STANDBY button again to turn off the unit. The red STANDBY indicator will switch on.
- Note: 1. When the unit is in iPod mode, if there is no iPod Player on the iPod dock bracket, the main unit will automatically switch off after 15 minutes.

CLOCK SETTING

During the unit in STANDBY mode

1. Press the CLOCK button to select the 12-hour or 24-hour.
2. Press and hold the CLOCK button, the HOUR digit will flash. Press the SKIP/SEARCH (DOWN or UP) button to adjust HOUR digit. Press the CLOCK button again, the MINUTE digit will also flash. Press the SKIP/SEARCH (DOWN or UP) button to adjust MINUTE digit.
3. Press the CLOCK button to confirm the time.

Note: If no action is taken for 10 seconds during this process, the system will reset and you must start again.

FUNCTION SELECT

Press the FUNCTION button to change the sound source. The display window will change as below

IPod → AUX

AUX INPUT

1. The AUX input is located at the rear of the unit. Use a 3.5mm stereo jack cable to connect audio equipment through the 1 INF IN jack.
2. To select the AUX function, repeatedly press the FUNCTION button on the unit (or remote control) until the AUX indicator is on the display window.
3. Press the VOLUME (UP or DOWN) button to adjust the sound output level.

Note: LINE in cable not included.

EQ CONTROL (on the remote control)

EQ shows the present sound tone. When you press the EQ button on the remote control, the sound tone changes as below

PASS → CLASSIC → ROCK → POP → JAZZ

4

TO SET SLEEP FUNCTION (on the remote control)

1. If you want to fall asleep to music, press the SLEEP button on the remote control.
2. You may adjust the iPod, AUX or TUNER sleep function to play to play between 1 and 90 minutes of music before the system shuts itself down automatically.

60 → 60 → 45 → 30 → 15 → 00

MUTE SETTING (on the remote control)

1. When you press the MUTE button once on the remote control, the audio output will be temporarily terminated. The MUTE and the VOLUME LEVEL indicators will flash a few seconds and the unit will return to its original display. The VOLUME LEVEL indicator will continue to flash. (F1)
2. Press the MUTE button again, both the volume level and the audio output will return to normal. (F2)

MUTE 87.50 F1

ALARM CLOCK OPERATION (on the remote control)

When the unit is in STANDBY mode

1. Press the "ALARM 1" SET/OFF button once on the remote control. The "AL 1 BELL SYMBOL" indicator will light on. Press the "ALARM 1" SET/OFF button one more time and hold it for a few seconds, then the "HOUR" indicator will flash. Adjust to the correct "HOUR" by pressing the "SKIP/TUNE SEARCH (UP or DOWN)" button.
2. Press the "ALARM 1" SET/OFF button again. The "MINUTE" indicator will flash. Adjust to the correct "MINUTE" by pressing the "SKIP/TUNE SEARCH (UP or DOWN)" button.
3. Press the "ALARM 1" SET/OFF button again to display the ALARM modes (TUNER, iPod or BUZZER). Select your preferred alarm mode by pressing the "SKIP/TUNE SEARCH" (icon for Skip or icon for Search) button on your remote control.
4. Press the "ALARM 1" SET/OFF button repeatedly to confirm the "ALARM 1" function, the "HOUR/MINUTE" indicator will flash and switch to "CLOCK", and then the "AL 1 BELL SYMBOL" indicator will light on the LCD display.

To set "ALARM 2"

1. Press the "ALARM 2" SET/OFF button once on the remote control. The "AL 2 BELL SYMBOL" indicator will light on and the "HOUR" indicator will flash. Adjust to the correct "HOUR" by pressing the "SKIP/TUNE SEARCH (UP or DOWN)" button.
2. Press the "ALARM 2" SET/OFF button. The "MINUTE" indicator will flash. Adjust to the correct "MINUTE" by pressing the "SKIP/TUNE SEARCH (UP or DOWN)" button.
3. Press the "ALARM 2" SET/OFF button again to display the ALARM modes (TUNER, iPod or BUZZER). Select your preferred alarm mode by pressing the "SKIP/TUNE SEARCH" (icon for Skip or icon for Search) button on your remote control.
4. Press the "ALARM 2" SET/OFF button repeatedly to confirm the "ALARM 2" function, the "HOUR/MINUTE" indicator will flash and change to "CLOCK", and then the "AL 2 BELL SYMBOL" indicator will light on the LCD display.

IPod OPERATION

When the unit is in STANDBY mode:

1. Insert the iPod device into the iPod dock connector.
2. Power on the unit and then press the FUNCTION button to iPod mode, the iPod LED indicator will flash. The iPod indicator will appear on the unit display. (F3)

When the unit is in iPod mode:

1. Press the PLAY/PAUSE button once to start the iPod playing. Adjust the volume level by pressing the VOLUME (UP or DOWN) button.
2. Press the PLAY/PAUSE button once to pause the current track. To resume the playback, press the PLAY/PAUSE button once again.
3. To skip forwards or backwards, press the SKIP/TUNE SEARCH (UP or DOWN) button to select the desired track.

4. Press the REPEAT/MONO/STEREO button to make the iPod a track repeatedly.

Note: iPod touch version 1.1.2 or above can support REPEAT function only.

How to select the iPod Menu mode:


1. When the unit is in iPod mode, press the MENU button on the remote control and the unit will enter the iPod MENU function.
2. Press the PRESET/ARROW (UP or DOWN) button to select from the menu list as following: Music > Extras > Photo Import (does not display on the display on the iPod) > Settings > Shuffle Songs > Backlight > Now Playing. These options will show on the iPod's display screen.
3. Press the SELECT button once on the remote control to select the desired menu folder.
4. Press the PRESET/ARROW (UP or DOWN) button again to search the content in each desired menu folder.
5. You can always return to the previous menu by pressing the MENU button.

Charging the iPod Player battery through the main unit:

1. iPod has an internal nonremovable battery, you may need to charge it if it has not been used for awhile.
 2. You can charge the iPod through the main unit automatically under the STANDBY or POWER ON mode.
- Note: 1. The iPod's battery is 80-percent charged in about an hour, and fully charged in about a few hours. If you charge it while playing music, it may take longer.

2. It is better not charge under the TUNER mode. It may interfere that the reception is at its best.

1. At any time, you can control the iPod via the remote control while the unit is in "iPod" or "iPod MENU" mode.
2. To avoid damage to iPod devices and/or the main unit, the iPod device must be docked while the unit is in STANDBY mode.

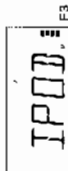

SNOOZE FUNCTION

Press the SNOOZE button after the TUNER, iPod or BUZZER alarm has sounded. The alarm will switch off and will come on again in approximately 5 minutes. You may repeat this cycle several times during the 1-hour alarm period.

NOTE: 1. When the bell is ringing, you can press the "STANDBY" button once or press the "ALARM 1 SET/OFF or ALARM 2 SET/OFF" button once on the remote control to stop the "ALARM 1 or 2" function. The "AL 1 or 2 BELL SYMBOL" indicator will still light on the LCD display. (Your set alarm time will remain for the following day when you use this function.)

2. When the bell is not ringing, if you want to stop the "ALARM 1 or 2" function fully, you can press the "ALARM 1 SET/OFF or ALARM 2 SET/OFF" button once on the remote control only. The "AL 1 or 2 BELL SYMBOL" indicator will turn off on the display. The function of the "ALARM 1 or 2" will cancel.
3. When the alarm is activated under the iPod or tuner mode, the volume can be adjusted.

RADIO OPERATION

1. Press the FUNCTION button to select TUNER mode on the unit (or remote control).
2. Select the desired frequency with the SKIP/TUNE SEARCH (UP or DOWN) button. Press continuously until you read the correct frequency or the reception is at its best.

Mono/Stereo Select

This unit can receive FM mode only.

1. When you want to select FM stereo station, press the REPEAT/MONO/STEREO button on the remote control.
2. When you receive a FM stereo station the "STEREO" indicator will appear on the display window, this means you are receiving FM transmission in stereo.
3. When you press the REPEAT/MONO/STEREO button again, the FM STEREO indicator will turn off and the unit will switch to FM MONO status.

8

Automatic Tuning

1. Press the SKIP/TUNE SEARCH (UP or DOWN) button for a few seconds, then release the button. The tuner will automatically search to the first station of sufficient signal strength.
2. Repeat the above procedure if you wish to select another station.

Programming preset stations

You can preset stations of your choice and store up 20 FM stations in the unit's memory. To store your selected broadcasting stations

1. When the unit is in TUNER mode, press the SKIP/TUNE SEARCH (UP or DOWN) button to search for the required station.
2. Press the MEMORY button on the remote control.
3. Press the PRESET/ARROW (+ or -) button on the remote control for your desired station channel.
4. Press the MEMORY button again to confirm your selection.
5. To program more stations into memory, repeat the above steps 1 to 4.

Note: To change the stored preset stations, repeat the above steps 1 to 4.

1. Storing a new station into a preset location will erase the station previously stored in that location.
2. Power off failure or power cord disconnection will clear the memory of all preset stations. Perform the station presetting procedures again to store the stations.

Selecting the Preset Stations

1. Press the PRESET/ARROW (UP or DOWN) button to select the desired preset station number.
2. The numeric location of that preset station is displayed along with the corresponding frequency.

FM Antenna

Make sure the FM antenna is extended to its full length. It may be necessary to vary the direction of this antenna wire until you find the position that provides the best reception for your favorite FM stations.

SPECIFICATION

POWER SUPPLY: AC/DC ADAPTOR INPUT 220-240V-50HZ

OUTPUT POWER: 4.5 W x 2

UNIT DIMENSION: 502(L) x 82(W) x 148 (H) mm

N.W.: 2.27 kg

RADIO SECTION

FREQUENCY RANGE: FM 87.5 - 108 MHz

SPECIFICATION SUBJECT TO CHANGE WITHOUT FURTHER NOTICE.

Dripping warning: * The product shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the product. * The normal ventilation of the product shall not be impeded for intended use. *

Institution Asia Pacific Pte Ltd.

23 New Industrial Road

#30-01 Century Industrial Building,

Singapore, 538209

www.idk-media.asia

www.idk-media.com.au

AP003921-A

Institution is a registered trademark of Institution Corp.

The IDK Life on Record logo is a trademark of IDK Corporation and is used under a trademark license from IDK Corporation.

* Made for iPod means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.

* Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

* iPod is a trademark of Apple Computer, Inc., registered in the US and other countries.

7

The unit supports the listed iPods

iPods shown are not included



Made for iPod mini[™]
(4GB, 6GB only)



Made for iPod
(4th generation)
(20GB only)



Made for iPod
(4th generation)
(40GB only)



**Made for iPod with
color display**
(4th generation)
(20GB, 30GB only)



**Made for iPod with
color display**
(4th generation)
(40GB, 60GB only)



Made for iPod with video
(5th generation)
(30GB only)



Made for iPod with video
(5th generation)
(60GB, 80GB only)



Made for iPod nano
(1st generation)
(1GB, 2GB, 4GB only)



Made for iPod nano
(2nd generation)(aluminum)
(2GB, 4GB, 8GB only)



Made for iPod nano
(3rd generation)(video)
(4GB, 8GB only)



Made for iPod nano
(4th generation)
(8GB, 16GB only)



Made for iPod classic
(80GB, 160GB only)



Made for iPod classic
(2nd generation)
(120GB only)



Made for iPod touch
(8GB, 16GB, 32GB only)



Made for iPod touch
(2nd generation)
(8GB, 16GB, 32GB only)